



## Removing of Nr. 36 Press Head



Loosen all eight screws by at least two turns



Remove these two screws, so entire height adjustment can be removed with the press.